



ORIGINAL	SUPERIOR
POWER	POWER
MUTING	MUTE
DVD MENU / ALBUM+	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTION	/ SOURCE
FM MODE	-/--
DISPLAY	
DVD DISPLAY	
ANGLE	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT/PRESET+	P+
SKIP PREV/PRESET -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
SLEEP	SLEEP
TV	TV/DTV
TUNER MENU	INFO

ORIGINAL	SUPERIOR
DVD TOP MENU / ALB.-	EPG
PLAY MODE	FAV
EJECT	/ NET TV
PAUSE	/ SMART TUBE
STOP	/ SMART VIDEO
REW/TUNING -	GREEN
PLAY	YELLOW
FWD/TUNING+	BLUE
AUDIO	SHIFT+MUTE
AMP. MENU	SHIFT+MENU
VIDEO	SHIFT+
TUNER/BAND	SHIFT+ -/--
ENTER	SHIFT+OK
REPEAT	SHIFT+BACK
NIGHT MODE	SHIFT+SLEEP
AUTO FORMAT DIRECT	SHIFT+

