



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
INPUT PREV	SHIFT+AV
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	 / SOURCE
DIRECT TUNE	-/--
DISPLAY	
PICTURE NAV	
MOVIE MUSIC	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
FM MODE	TV/DTV
SOUND FIELD	INFO

ORIGINAL	SUPERIOR
AMP MENU	EPG
PROGRESSIVE	FAV
PAUSE	
STOP	 / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
BASS TREBLE	SHIFT+1
DIMMER	SHIFT+2
SACD / CD	SHIFT+3
DVD DISPLAY	SHIFT+ 
TUNE+	SHIFT+UP
TUNE -	SHIFT+DOWN
STEP BACK	SHIFT+LEFT
STEP FWD	SHIFT+RIGHT
REPEAT	SHIFT+BACK
NIGHT	SHIFT+SLEEP
TUNER MENU	SHIFT+EPG
ANGLE	SHIFT+FAV

