



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
DVD MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 / 10	0
FUNCTION	AV
>10	-/--
DISPLAY	
SOUND FIELD	
DVD SETUP	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT / PRESET+	P+
SKIP PREV. / PRESET-	P-
DOWN / UP	DOWN / UP
LEFT / RIGHT	LEFT / RIGHT
ENTER	OK
/ RETURN	BACK
SLEEP	SLEEP
MONO / STEREO	TV/DTV
TITLE	INFO
MEMORY	EPG

ORIGINAL	SUPERIOR
TEST TONE	FAV
PAUSE	
STOP	
REW / TUNING-	GREEN
PLAY / SELECT	YELLOW
FWD / TUNING+	BLUE
TV	SHIFT+POWER
AUDIO	SHIFT+MUTE
AMP MENU	SHIFT+MENU
LEVEL – CENTER -/+	SHIFT+ 4/1
LEVEL – REAR -/+	SHIFT+ 5/2
LEVEL – WOOFER -/+	SHIFT+ 6/3
BAND	SHIFT+ -/--
DVD DISPLAY	SHIFT+
P. MODE	SHIFT+
ANGLE	SHIFT+
NAME	SHIFT+
TV VOL -/+	SHIFT+ VOL-/+
TV CH -/+	SHIFT+ P-/+
SLOW – /	SHIFT+ LEFT/RIGHT
2 nd ENTER	SHIFT+OK
REPEAT	SHIFT+BACK
TIME	SHIFT+SLEEP
TV / VIDEO	SHIFT+ TV/DTV
DIMMER	SHIFT+INFO

