


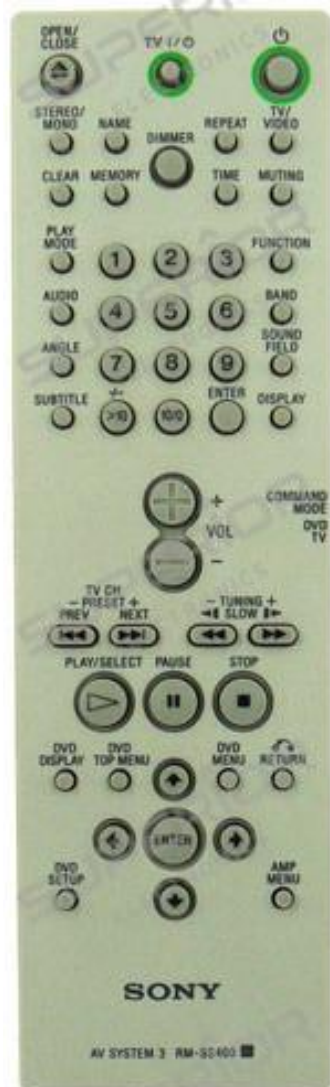

ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	/ SOURCE
NAME	-/--
DISPLAY	
MEMORY	
SOUNDFIELD	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
TIME	SLEEP
INPUT TV	TV/DTV
NEXT DISC	INFO

ORIGINAL	SUPERIOR
FUNCTION	EPG
BAND	FAV
OPEN/CLOSE	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
OFF	SHIFT+POWER
VIDEO 1	SHIFT+1
VIDEO 2	SHIFT+2
DVD	SHIFT+3
SAT	SHIFT+4
AUX	SHIFT+5
ON	SHIFT+0
NEXT BAND	SHIFT+RIGHT
ENTER	SHIFT+OK
ANGLE	SHIFT+FAV
PLAY MODE	SHIFT+YELLOW

