

ORIGINAL	SUPERIOR
POWER	POWER
MUTING	MUTE
DVD MENU	MENU
DVD TOP MENU	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV ENTER (DVD)	 / SOURCE
>10 / -/--	-/--
DISPLAY	
DSGX	
ANGLE	
FUNCTION	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT / PRESET+	P+
SKIP PREV / PRESET -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
SONY TV DIR. (DVD)	TV/DTV
DIMMER	INFO

ORIGINAL	SUPERIOR
PROGRAM	EPG
MODE	FAV
EJECT	 / NET TV
PAUSE	
STOP	 / SMART
REW/SLOW B./TUN -	GREEN
PLAY	YELLOW
FWD/SLOW F./TUN +	BLUE
AUDIO	SHIFT+MUTE
TUNER MENU	SHIFT+MENU
CLEAR	SHIFT+EXIT
TUNER / BAND	SHIFT+ -/--
DVD DISPLAY	SHIFT+ 
DVD SETUP	SHIFT+ 
SUBTITLE	SHIFT+ 
REPEAT	SHIFT+BACK
FM MODE	SHIFT+FAV
AUTO/FORMAT/DIR.	SHIFT+ 
TV	
POWER	SHIFT+POWER
1/2/3/4/5	SHIFT+1/2/3/4/5
6/7/8/9/0	SHIFT+6/7/8/9/0
TV/VIDEO	SHIFT+ 
TV ENTER (TV)	SHIFT+OK

[illegible]