



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
TUNER MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTION	/ SOURCE
>10	-/--
DISPLAY	
AUTO FORMAT DIRECT	
TUNER/BAND	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT/PRESET+	P+
SKIP PREV/PRESET -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
SLEEP	SLEEP
TV/VIDEO	TV/DTV
DIMMER	INFO

ORIGINAL	SUPERIOR
PLAY MODE	EPG
MODE	FAV
EJECT	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
DVD MENU	SHIFT+MENU
DVD DISPLAY	SHIFT+
ANGLE	SHIFT+
DVD SETUP	SHIFT+
DSGX	SHIFT+
ENTER	SHIFT+OK
REPEAT	SHIFT+BACK
NIGHT MODE	SHIFT+SLEEP
FM MODE	SHIFT+TV/DTV
DVD TOP MENU	SHIFT+FAV

