



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
DVD MENU	MENU
DVD TOP MENU	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
BAND	AV
>10	-/--
DVD DISPLAY	
ANGLE	
NAME	
SUBTITLE	
VOLUME+	VOL+
VOLUME-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
SLEEP	SLEEP
FUNCTION	EPG
MEMORY	FAV

ORIGINAL	SUPERIOR
EJECT	
PAUSE	
STOP	
REW / SLOW BACK	GREEN
PLAY	YELLOW
FWD / SLOW FWD	BLUE
AUDIO	SHIFT+MUTE
AMP MENU	SHIFT+MENU
CLEAR	SHIFT+EXIT
STEREO / MONO	SHIFT+ -/--
DISPLAY	SHIFT+
SOUND FIELD -	SHIFT+ V-
SOUND FIELD +	SHIFT+ V+
PRESET-	SHIFT+ P-
PRESET+	SHIFT+ P+
TUNING-	SHIFT+DOWN
TUNING+	SHIFT+UP
ALBUM-	SHIFT+LEFT
ALBUM+	SHIFT+RIGHT
2nd ENTER	SHIFT+OK
REPEAT	SHIFT+BACK
NIGHT MODE	SHIFT+SLEEP
DVD SETUP	SHIFT+EPG
BASS LEVEL	SHIFT+FAV
PLAY MODE	SHIFT+YELLOW

