



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
POWER	POWER
MUSIC / MENU	MENU
CANCEL / NO	EXIT
FUNCTION	 / SOURCE
EDIT	-/--
DISPLAY	
BAND	
VOL+	VOL+
VOL -	VOL -
CD SKIP NEXT	P+
CD SKIP PREV	P -
TUNER PRESET+	UP
TUNER PRESET -	DOWN
	LEFT
	RIGHT
ENTER / YES	OK
REPEAT	BACK
CLOCK/TIMER SET	SLEEP
CLOCK/TIMER SELECT	TV/DTV
SCROLL	INFO
PLAY MODE	EPG
LOOP	FAV
CD PAUSE	
CD STOP	 / SMART
CD PLAY	YELLOW

[illegible]