

ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
POWER	POWER	EPG	EPG	SCAN REW	SHIFT+ P -
SURROUND	MUTE	BOOKMARK	FAV	STEP NEXT	SHIFT+UP
MENU	MENU	EJECT	 / NET TV	STEP PREV	SHIFT+DOWN
EXIT	EXIT	PAUSE		SLOW REW	SHIFT+LEFT
1/2/3/4/5	1/2/3/4/5	STOP	 / SMART	SLOW FWD	SHIFT+RIGHT
6/7/8/9/0	6/7/8/9/0	REC	RED	SET	SHIFT+OK
INPUT SELECT	 / SOURCE	REW	GREEN	REPEAT	SHIFT+BAC
DVD	-/--	PLAY	YELLOW	SCHEDULE	SHIFT+TV/D
DISPLAY		FWD	BLUE	TITLE LIST	SHIFT+INFI
TOOLS		TIMER	SHIFT+POWER	RECORD MODE	SHIFT+EPG
SETUP		AUDIO	SHIFT+MUTE	ANGLE	SHIFT+FAV
TEXT/TIME		TOP MENU	SHIFT+MENU	SYNCHRO REC	SHIFT+
SKIP NEXT	VOL+	SEARCH MODE	SHIFT+EXIT	REC PAUSE	SHIFT+
SKIP PREV	VOL -	CURSOR MODE	SHIFT+1	REC STOP	SHIFT+
PROG+	P+	DVD FOLDER	SHIFT+2	RED	SHIFT+RED
PROG -	P -	VIDEO TOGGLE	SHIFT+3	GREEN	SHIFT+GREEN
UP	UP	PHOTO	SHIFT+4	YELLOW	SHIFT+YELLOW
DOWN	DOWN	TIMER LIST	SHIFT+5	BLUE	SHIFT+BLUE
LEFT	LEFT	FILE	SHIFT+6		
RIGHT	RIGHT	HDD	SHIFT+ 		
OK	OK	CHAPTER MARK	SHIFT+ 		
CANC	BACK	MARK ERASE	SHIFT+ 		
EDIT	SLEEP	PROGRAM	SHIFT+ 		
TV/DVD	TV/DTV	SUBTITLE	SHIFT+ 		
INFO	INFO	SCAN FWD	SHIFT+ P+		

