



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SA – CD/CD	 / SOURCE
TOP MENU	-/--
DISPLAY	
WIDE MODE	
PICTURE NAVI	
SUBTITLE	
SKIP NEXT	P +
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
VIDEO OFF	SLEEP
SA – CD7MULTI72 CH	TV/DTV
VIDEO CONTROL	EPG
JOG	FAV
OPEN/CLOSE	 / NET TV

[illegible]