



| ORIGINAL           | SUPERIOR         |
|--------------------|------------------|
|                    | <b>POWER</b>     |
| <b>DVD MENU</b>    | <b>MENU</b>      |
| <b>CLEAR</b>       | <b>EXIT</b>      |
| <b>1/2/3/4/5</b>   | <b>1/2/3/4/5</b> |
| <b>6/7/8/9/0</b>   | <b>6/7/8/9/0</b> |
| <b>AV CENTER</b>   | <b>/ SOURCE</b>  |
| <b>TV/VIDEO</b>    | <b>-/--</b>      |
| <b>DISPLAY</b>     |                  |
| <b>WIDE MODE</b>   |                  |
| <b>SET UP</b>      |                  |
| <b>SEARCH MODE</b> |                  |
| <b>VOL+</b>        | <b>VOL+</b>      |
| <b>VOL -</b>       | <b>VOL -</b>     |
| <b>SKIP NEXT</b>   | <b>P+</b>        |
| <b>SKIP PREV</b>   | <b>P -</b>       |
| <b>UP</b>          | <b>UP</b>        |
| <b>DOWN</b>        | <b>DOWN</b>      |
| <b>LEFT</b>        | <b>LEFT</b>      |
| <b>RIGHT</b>       | <b>RIGHT</b>     |
| <b>ENTER</b>       | <b>OK</b>        |
| <b>/ RETURN</b>    | <b>BACK</b>      |
| <b>TIME</b>        | <b>SLEEP</b>     |
| <b>TV/DVD</b>      | <b>TV/DTV</b>    |
| <b>TITLE</b>       | <b>INFO</b>      |
| <b>PROGRAM</b>     | <b>EPG</b>       |

| ORIGINAL               | SUPERIOR            |
|------------------------|---------------------|
| <b>SHUFFLE</b>         | <b>FAV</b>          |
| <b>OPEN/CLOSE</b>      | <b>/ NET TV</b>     |
| <b>PAUSE</b>           |                     |
| <b>STOP</b>            | <b>/ SMART</b>      |
| <b>REW</b>             | <b>GREEN</b>        |
| <b>PLAY</b>            | <b>YELLOW</b>       |
| <b>FWD</b>             | <b>BLUE</b>         |
| <b>AUDIO CHANGE</b>    | <b>SHIFT+</b>       |
| <b>ANGLE CHANGE</b>    | <b>SHIFT+</b>       |
| <b>SUBTITLE CHANGE</b> | <b>SHIFT+</b>       |
| <b>SUBTITLE ON/OFF</b> | <b>SHIFT+</b>       |
| <b>AV VOL+</b>         | <b>SHIFT+ VOL+</b>  |
| <b>AV VOL -</b>        | <b>SHIFT+ VOL -</b> |
| <b>PROG+</b>           | <b>SHIFT+ P+</b>    |
| <b>PROG -</b>          | <b>SHIFT+ P -</b>   |
| <b>SLOW &gt;</b>       | <b>SHIFT+UP</b>     |
| <b>&lt; SLOW</b>       | <b>SHIFT+DOWN</b>   |
| <b>&lt; STEP</b>       | <b>SHIFT+LEFT</b>   |
| <b>STEP &gt;</b>       | <b>SHIFT+RIGHT</b>  |
| <b>ENTER</b>           | <b>SHIFT+OK</b>     |
| <b>REPEAT</b>          | <b>SHIFT+BACK</b>   |
| <b>A ← → B</b>         | <b>SHIFT+FAV</b>    |
|                        |                     |
|                        |                     |
|                        |                     |

