

ORIGINAL	SUPERIOR
	POWER
AUDIO DUB	MUTE
MENU	MENU
TIMER CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	 / SOURCE
-/--	-/--
EDIT MONITOR	
PinP	
FRAME	
MAIN / SUB	
SEARCH FWD	VOL+
SEARCH REW	VOL -
PROG.+	P+
PROG. -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
EXECUTE	OK
COUNTER RESET	BACK
TIMER CHECK	SLEEP
TV/VCR	TV/DTV
DATA SCREEN	INFO

ORIGINAL	SUPERIOR
FUNCTION MEMORY	EPG
INDEX MARK	FAV
REC MODE	 / NET TV
PAUSE	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
DIGITAL OFF	SHIFT+MUTE
TV SCAN	SHIFT+MENU
TIMER REC ON/OFF	SHIFT+EXIT
SHIFT	SHIFT+ 
INDEX	SHIFT+ 
X2	SHIFT+ 
X 1/5	SHIFT+ 
SHUTTLE EDIT LEFT	SHIFT+LEFT
SHUTTLE EDIT RIGHT	SHIFT+RIGHT
TIMER ON SCREEN	SHIFT+OK
INDEX ERASE	SHIFT+FAV

ORIGINAL	SUPERIOR
TV	
	SHIFT+PO
1/2/3/4/5	SHIFT+1/2/3
6/7/8/9/0	SHIFT+6/7/8
-/--	SHIFT+ -
MAIN / SUB	SHIFT+
VOL+	SHIFT+ V
VOL -	SHIFT+ V
PROG.+	SHIFT+ P
PROG. -	SHIFT+ I
DATA SCREEN	SHIFT+IN
TV/VCR	SHIFT+TV/

