



ORIGINAL	SUPERIOR
	POWER
	MUTE
HOME	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
TITLE LIST	-/--
OPTIONS	
VOL+	VOL+
VOL -	VOL -
PROG+ /	P+
PROG - /	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
	OK
RETURN / BACK	BACK
ANALOG / DIGITAL	TV/DTV
i+ /	INFO
GUIDE	EPG
TV PAUSE	
RED	RED

ORIGINAL	SUPERIOR
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
SYNC. MENU	SHIFT+MENU
3D	SHIFT+3
MEDIA	SHIFT+6
SEN	SHIFT+8
RELATED SEARCH	SHIFT+ -/--
	SHIFT+
	SHIFT+
TV / RADIO	SHIFT+ TV/DTV
? / i-MANUAL	SHIFT+INFO
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

