



ORIGINAL	SUPERIOR
	POWER
	MUTE
HOME	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
TRACK ID	-/--
OPTIONS	
VOL+	VOL+
VOL -	VOL -
PROG/CH+ /	P+
PROG/CH - /	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
	OK
BACK/RETURN	BACK
DIGITAL / ANALOG	TV/DTV
i+ /	INFO
GUIDE /	EPG
SEN	FAV

ORIGINAL	SUPERIOR
TV PAUSE	/ SMART TUBE
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
SYNC. MENU	SHIFT+MENU
3D	SHIFT+3
	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
TV/RADIO	SHIFT+ TV/DTV
? / I – MANUAL	SHIFT+INFO
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

