



ORIGINAL	SUPERIOR
	POWER
	MUTE
ACTION MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
TITLE LIST	-/--
HOME	
DIGITAL / ANALOG	
SYNC MENU	
VOL+	VOL+
VOL -	VOL -
/ PROG.+	P+
/ PROG. -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
+	OK
/ BACK	BACK
TV	TV/DTV
/ i+	INFO
GUIDE	EPG

ORIGINAL	SUPERIOR
NETFLIX	/ NET TV
GOOGLE PLAY	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
HELP	SHIFT+6
DISCOVER	SHIFT+
	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
	SHIFT+BACK
TV / RADIO	SHIFT+TV/DTV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

