



ORIGINAL	SUPERIOR
	POWER
	MUTE
HOME	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
DISCOVER	
VOL+	VOL+
VOL -	VOL -
PROG+ /	P+
PROG - /	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
	OK
RETURN / BACK	BACK
DIGITAL / ANALOG	TV/DTV
i+ /	INFO
GUIDE	EPG
FOOTBALL	FAV
NETFLIX	/ NET TV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
SYNC. MENU	SHIFT+MENU
TV	SHIFT+1
HELP	SHIFT+6
TITLE LIST	SHIFT+ -/--
ACTION MENU	SHIFT+
	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
	SHIFT+BACK
TV / RADIO	SHIFT+ TV/DTV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

