



ORIGINAL	SUPERIOR
	POWER
	MUTE
HOME	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
TITLE LIST	-/--
SYNC MENU	
OPTIONS	
VOL+	VOL+
VOL -	VOL -
/ PROG+	P+
/ PROG -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
+	OK
/ RETURN	BACK
SLEEP	SLEEP
DIGITAL / ANALOG	TV/DTV
/ i+	INFO

ORIGINAL	SUPERIOR
/ GUIDE	EPG
NETFLIX	/ NET TV
YOUTUBE	/ SMART TUBE
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
	SHIFT+BACK
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

