



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
REC LIST / D. SETUP	-/--
DISPLAY	
TEXT / D. DISP.	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
DTV / ATV	TV/DTV
INDEX / ZOOM	INFO
GUIDE	EPG
FAV / LIST	FAV

ORIGINAL	SUPERIOR
ASPECT	/ NET TV
FREEZE	/ SMART TUBE
HOLD / GOTO	/ SMART VIDEO
RED / PROG.	RED
GREEN / STEP	GREEN
YELLOW / REPEAT	YELLOW
CYAN / A - B	BLUE
MTS	SHIFT+MUTE
CANCEL / ANGLE	SHIFT+EXIT
P. MODE	SHIFT+1
S. MODE	SHIFT+2
REVEAL / D. MENU	SHIFT+
SIZE / D. TITLE	SHIFT+
SUBTITLE	SHIFT+
SUB.PG / AUDIO	SHIFT+DOWN
SKIP NEXT	SHIFT + P+
SKIP PREV	SHIFT+ P -
TIMESHIFT	SHIFT+SLEEP
TV / RADIO	SHIFT+ TV/DTV
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

