

ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
ATV MENU	MENU
EXIT / 	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	AV
-/-- / 10+	-/--
P. STD /  	
REPEAT / TIMER / 	
SUBTITLE / 	
TTX / 	
VOL+	VOL+
VOL-	VOL-
PROGRAM+	P+
PROGRAM-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
GO TO / TV.R / 	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
TITLE / EPG / 	EPG
MENU / FAV / 	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO / I/II	SHIFT+MUTE
DVD/DVB SETUP	SHIFT+MENU
S. STD /  	SHIFT+ 
SLOW / SUB / 	SHIFT+ 
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
EJECT	SHIFT+ 
STOP	SHIFT+ 
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

