



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
ASPECT	
PICTURE MODE	
TEXT	
VOL+	VOL+
VOL-	VOL -
P+	P+
P-	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
USB/SD	TV/DTV
INFO	INFO
PROGRAM	EPG
EFFECT	FAV

ORIGINAL	SUPERIOR
RED / SUBP	RED
GREEN / REVEAL	GREEN
YELLOW / HOLD	YELLOW
BLUE / INDEX	BLUE
DVD MENU	SHIFT+MENU
NICAM	SHIFT+1
MIX	SHIFT+2
REPEAT A – B	SHIFT+3
SIZE	SHIFT+
ZOOM	SHIFT+
CANC	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
TITLE	SHIFT+INFO
DVD SETUP	SHIFT+EPG
DVD LANGUAGE	SHIFT+FAV
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

