



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
TV / RADIO	-/--
PR. LIST	
ZOOM	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ RECALL	BACK
SLEEP	SLEEP
ATV / DTV	TV/DTV
INFO	INFO
INDEX	EPG

ORIGINAL	SUPERIOR
FAV	FAV
PIC. MODE	/ NET TV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
S. MODE	SHIFT+MUTE
I/II / AUDIO	SHIFT+1
REVEAL	SHIFT+
REC LIST	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAUSE / SUBPAGE	SHIFT+
STOP / HOLD	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / SIZE	SHIFT+YELLOW
FWD	SHIFT+BLUE

