



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	AV
MODE	-/--
DISPLAY	
SUB.	
TXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
SLEEP	SLEEP
TV / R.	TV/DTV
FIND	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
RED / AUDIO	RED
GREEN / PAUSE	GREEN
YELLOW / ZOOM	YELLOW
BLUE / INFO	BLUE
F1	SHIFT+1
F2	SHIFT+2
F3	SHIFT+3
F4	SHIFT+4
F5	SHIFT+5
SAT	SHIFT+7
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
PAGE DOWN	SHIFT+DOWN
PAGE UP	SHIFT+UP
TIME	SHIFT+SLEEP
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

