



ORIGINAL	SUPERIOR
	POWER
	MUTE
HOME	MENU
VIDEO OUT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DEVICE	/ SOURCE
4:3 / 16:9	-/--
BACKLIGHT LCD	
GOTO	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT / PROG -	LEFT
RIGHT / PROG+	RIGHT
ENTER	OK
	BACK
SLIDE SHOW	SLEEP
SELECT/BGM	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
FILE	EPG
PHOTO DIGEST	FAV
STOP	/ SMART
REW	GREEN
PLAY/PAUSE	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
MUSIC	SHIFT+MENU
COPY	SHIFT+EXIT
PHOTO	SHIFT+
ZOOM	SHIFT+
A – B ROTATE	SHFIT+
	SHIFT+
REPEAT	SHIFT+BACK
MOVIE	SHIFT+FAV

