



| ORIGINAL         | SUPERIOR         |
|------------------|------------------|
|                  | <b>POWER</b>     |
|                  | <b>MUTE</b>      |
| <b>MENU</b>      | <b>MENU</b>      |
| <b>EXIT</b>      | <b>EXIT</b>      |
| <b>1/2/3/4/5</b> | <b>1/2/3/4/5</b> |
| <b>6/7/8/9/0</b> | <b>6/7/8/9/0</b> |
| <b>SOURCE</b>    | <b>/ SOURCE</b>  |
| <b>-/--</b>      | <b>-/--</b>      |
| <b>DISPLAY</b>   |                  |
| <b>ASPECT</b>    |                  |
| <b>T. SHIFT</b>  |                  |
| <b>TEXT</b>      |                  |
| <b>VOL+</b>      | <b>VOL+</b>      |
| <b>VOL -</b>     | <b>VOL -</b>     |
| <b>CH+</b>       | <b>P+</b>        |
| <b>CH -</b>      | <b>P -</b>       |
| <b>UP</b>        | <b>UP</b>        |
| <b>DOWN</b>      | <b>DOWN</b>      |
| <b>LEFT</b>      | <b>LEFT</b>      |
| <b>RIGHT</b>     | <b>RIGHT</b>     |
| <b>ENTER</b>     | <b>OK</b>        |
|                  | <b>BACK</b>      |
| <b>SLEEP</b>     | <b>SLEEP</b>     |
| <b>DTV</b>       | <b>TV/DTV</b>    |
| <b>---</b>       | <b>EPG</b>       |

| ORIGINAL            | SUPERIOR             |
|---------------------|----------------------|
| <b>FAV</b>          | <b>FAV</b>           |
| <b>AUTO</b>         | <b>/ NET TV</b>      |
| <b>FREEZE</b>       | <b>/ SMART TUBE</b>  |
| <b>HOLD</b>         | <b>/ SMART VIDEO</b> |
| <b>RED</b>          | <b>RED</b>           |
| <b>GREEN</b>        | <b>GREEN</b>         |
| <b>YELLOW</b>       | <b>YELLOW</b>        |
| <b>BLUE</b>         | <b>BLUE</b>          |
| <b>AUDIO</b>        | <b>SHIFT+MUTE</b>    |
| <b>P. MODE</b>      | <b>SHIFT+1</b>       |
| <b>S. MODE</b>      | <b>SHIFT+2</b>       |
| <b>NICAM / A2</b>   | <b>SHIFT+3</b>       |
| <b>REVEAL</b>       | <b>SHIFT+</b>        |
| <b>SIZE</b>         | <b>SHIFT+</b>        |
| <b>SUBTITLE</b>     | <b>SHIFT+</b>        |
| <b>S. PAGE</b>      | <b>SHIFT+DOWN</b>    |
| <b>SKIP NEXT</b>    | <b>SHIFT+ P+</b>     |
| <b>SKIP PREV</b>    | <b>SHIFT+ P -</b>    |
| <b>TV / RADIO</b>   | <b>SHIFT+TV/DTV</b>  |
| <b>INDEX</b>        | <b>SHIFT+INFO</b>    |
| <b>STOP</b>         | <b>SHIFT+</b>        |
| <b>REC</b>          | <b>SHIFT+RED</b>     |
| <b>REW</b>          | <b>SHIFT+GREEN</b>   |
| <b>PLAY / PAUSE</b> | <b>SHIFT+YELLOW</b>  |
| <b>FWD</b>          | <b>SHIFT+BLUE</b>    |

