



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
LIST	-/--
REVEAL	
ASPECT	
MIX	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
TV / R	TV/DTV
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
PICTURE	/ NET TV
HOLD	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHHIFT+MUTE
	SHIFT+
HDMI	SHIFT+
SIZE	SHIFT+
SUB. PAGE	SHIFT+
SUB	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
	SHIFT+BACK
DTV	SHIFT+TV/DTV
INDEX	SHIFT+INFO
PROG	SHIFT+EPG
SOUND	SHIFT+FAV
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

