



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
	/ SOURCE
LIST	-/--
ZOOM	
TEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
←	BACK
TV	TV/DTV
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
NETFLIX	/ NET TV
YOUTUBE	/ SMART TUBE
SMART	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
/ LANG / AD	SHIFT+MUTE
USB	SHIFT+
SUBT.	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

