



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
LIST	-/--
USB	
OPTION	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
TV	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
NETFLIX	/ NET TV
YOUTUBE	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
SUB	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
ZOOM+	SHIFT+UP
ZOOM -	SHIFT+DOWN
	SHIFT+BACK
ECO	SHIFT+FAV
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

