



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
SORTIE	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	 / AV
LIST	-/--
ZOOM	
V+	VOL+
V-	VOL-
P+	P+
P-	P-
UP / CHAINE+	UP
DOWN / CHAINE-	DOWN
LEFT / VOL-	LEFT
RIGHT / VOL+	RIGHT
OK	OK
TV / R	TV/DTV
INFO	INFO
EPG	EPG
RED / RCL	RED
GREEN / PAUSE	GREEN
YELLOW / SOUS	YELLOW
BLUE / TEXT	BLUE

[illegible]