



ORIGINAL	SUPERIOR
POWER	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	AV
LIST	-/--
P. MODE	
ASPECT	
T. SHIFT	
VOL+	VOL+
VOL-	VOL-
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
	SLEEP
DTV / ATV	TV/DTV
i	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
STILL	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
S. MODE	SHIFT+MUTE
REC MENU	SHIFT+MENU
	SHIFT+
	SHIFT+
	SHIFT+
SKIP PREV. / MIX	SHIFT+ P-
SKIP NEXT /	SHIFT+ P+
DTV/RADIO / REPEAT	SHIFT+ TV/DTV
	SHIFT+INFO
AUDIO	SHIFT+FAV
PAUSE	SHIFT+
STOP /	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

