



ORIGINAL	SUPERIOR
POWER	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
ENT	-/--
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
JUMP	BACK
SLEEP	SLEEP
SWAP	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
	EPG
FAV. CH	FAV
FREEZE	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
I – II	SHIFT+MUTE
P. MODE	SHIFT+
P. SIZE	SHIFT+
PIP	SHIFT+
S. MODE	SHIFT+

