



ORIGINAL	SUPERIOR
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0/10	0
USB	/ SOURCE
10+	-/--
V-MODE	
ZOOM	
SETUP	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
STEP	SLEEP
N / P	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PROG.	EPG
GO TO	FAV
EJECT	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
RESET	SHIFT+EXIT
OSD	SHIFT+
ANGLE	SHIFT+
LANGUAGE	SHIFT+
REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP
L/R	SHIFT+ TV/DTV
PBC	SHIFT+EPG
SLOW	SHIFT+

