



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	 / SOURCE
-/--	-/--
DISPLAY	
SIZE	
SUBTITLE	
TV/TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
DTV	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
HOLD	 / SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
NICAM/A2	SHIFT+MUTE
CANCEL	SHIFT+EXIT
PICTURE	SHIFT+1
SOUND	SHIFT+2
CH/LIST	SHIFT+ -/--
REVEAL	SHIFT+ 
ASPECT	SHIFT+ 
SUBPAGE	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REP	SHIFT+BACK
TV/RADIO	SHIFT+TV/DTV
INDEX	SHIFT+INFO
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

