



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ AV
-/--	-/--
DISPLAY	
PIC. FORMAT	
LANGUAGE	
TV / TXT	
VOL+ / RIGHT	VOL+
VOL- / LEFT	VOL-
CH+ / UP	P+
CH- / DOWN	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
DVB	TV/DTV
INDEX	INFO

ORIGINAL	SUPERIOR
FAV	FAV
PICTURE	
HOLD	
RED / TV/RADIO	RED
GREEN / EPG	GREEN
YELLOW	YELLOW
BLUE	BLUE
SOUND	SHIFT+MUTE
CANCEL	SHIFT+EXIT
NICAM / A2	SHIFT+1
REVEAL	SHIFT+
SIZE	SHIFT+
SUBTITLE	SHIFT+
EARPHONE VOL -	SHIFT+ VOL-
EARPHONE VOL +	SHIFT+ VOL+
SUBPAGE	SHIFT+DOWN
FAV-	SHIFT+LEFT
FAV+	SHIFT+RIGHT

