



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
TV MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	AV
RADIO / +10	-/--
DISPLAY	
TITLE SIZE	
D. MENU / MIX	
GOTO / TEXT	
V+	VOL+
V-	VOL-
P+	P+
P-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK / ENTER	OK
	BACK
SLEEP	SLEEP
	INFO
EPG	EPG

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
I/II / AUDIO	SHIFT+AUDIO
MEDIA	SHIFT+6
D. DIS. / REVEAL	SHIFT+
ZOOM / INDEX	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT / SUBPAGE	SHIFT+ P+
SKIP PREV. / FAV	SHIFT+ P-
T. SHIFT	SHIFT+SLEEP
P. MODE	SHIFT+EPG
S. MODE	SHIFT+FAV
STOP / LANGUAGE	SHIFT+
REC	SHIFT+RED
REW / FAV-	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD / FAV+	SHIFT+BLUE

