



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
-/--	-/--
DISPLAY	
ZOOM / PC.A	
MIX / MENU	
SUBPAGE / AUDIO	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INDEX / PCB	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
UPDATE / A-B	
HOLD / FRE. / SUB. T.	
RED / INFO	RED
GR. / ANG. / DVD&TXT	GREEN
YELLOW / SLOW F.	YELLOW
BLUE / EJECT	BLUE
NICAM	SHIFT+MUTE
REC. MENU	SHIFT+MENU
P. MODE	SHIFT+1
S. MODE	SHIFT+2
USB	SHIFT+AV
EDIT	SHIFT+ -/--
REVEAL / SUBT. / REP.	SHIFT+
ZOOM / SIZE	SHIFT+
SETUP / ON/OFF	SHIFT+
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

