



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/-- /10+	-/--
ASPECT	
SIZE	
MIX	
TEXT	
VOL+	VOL+
VOL -	VOL -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
BACK	BACK
SLEEP	SLEEP
TV/RADIO	TV/DTV
INFO	INFO
EPG/DVD-MENU	EPG
FAV/AB	FAV

ORIGINAL	SUPERIOR
HOLD	 / SMART
RED/PROGRAM	RED
GREEN/GO TO	GREEN
YELLOW/REPEAT	YELLOW
BLUE/SLOW	BLUE
AUDIO/NICAM	SHIFT+MUTE
CANCEL	SHIFT+EXIT
P-MODE	SHIFT+1
S-MODE	SHIFT+2
PVR	SHIFT+ 
USB	SHIFT+ -/--
REVEAL	SHIFT+ 
SUBTITLE	SHIFT+ 
SUBPAGE	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
CLOCK	SHIFT+SLEEP
INDEX	SHIFT+INFO
CANALES/DVD-SETUP	SHIFT+EPG
EJECT	SHIFT+ 
STOP	SHIFT+ 
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

