



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	 / SOURCE
-/--	-/--
DISPLAY	
P. SIZE	
MIXER / AUDIO	
TELETEXT	
VOL+/-	VOL+/-
CH+/-	P+/-
UP/DOWN	UP/DOWN
LEFT/RIGHT	LEFT/RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
TV/RD.	TV/DTV
INFO/ANGLE	INFO
EPG	EPG
FAV	FAV
EJECT (BLACK)	 / NET TV
PLAY/PAUSE (BLACK)	

ORIGINAL	SUPERIOR
HOLD/REP.	 / SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
I – II	SHIFT+MUTE
P. MODE	SHIFT+1
A. MODE	SHIFT+2
LIST	SHIFT+ -/--
REVEAL/MENU	SHIFT+ 
SIZE/SUB.	SHIFT+ 
SUBTITLE/TITLE	SHIFT+ 
SKIP PREV/NEXT	SHIFT+ P+/-
SET / P. UP	SHIFT+ VOL+
DOWN / PAUSE	SHIFT+DOWN
UP / CANCEL	SHIFT+UP
LEFT / P. DOWN	SHIFT+LEFT
RIGHT / SUB. RIGHT	SHIFT+RIGHT
OK / SUB. LEFT	SHIFT+OK
INDEX / OSD	SHIFT+INFO
EJECT	SHIFT+ 
STOP	SHIFT+ 
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

