



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/-- / +10	-/--
P-MODE	
SUBTITLE	
FAV+	P+
FAV -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
BACK	BACK
SLEEP	SLEEP
INFO	INFO
EPG/DVD MENU	EPG
FAV / AB	FAV
RED/PROGRAM	RED
GREEN/GO TO	GREEN
YELLOW/ANGLE	YELLOW

ORIGINAL	SUPERIOR
BLUE/USB-CARD	BLUE
AUDIO/NICAM	SHIFT+MUTE
DVD SETUP	SHIFT+MENU
S-MODE	SHIFT+1
SKIP NEXT/SUBPAGE	SHIFT+ P+
SKIP PREV/TV-RADIO	SHIFT+ P -
PAGE UP	SHIFT+UP
PAGE DOWN	SHIFT+DOWN
CANCEL	SHIFT+LEFT
CLOCK	SHIFT+RIGHT
OK/REVEAL	SHIFT+OK
REPEAT/CANALES	SHIFT+BACK
EJECT/TELTEXT	SHIFT+ 
STOP/HOLD	SHIFT+ 
REW/INDEX	SHIFT+GREEN
PLAY-PAUSE/MIX	SHIFT+YELLOW
FWD/SIZE	SHIFT+BLUE

