



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU / PBC	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
+10	-/--
ANGLE	
ZOOM	
SETUP	
TITLE / TXT	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT / FAV-	LEFT
RIGHT / FAV+	RIGHT
ENTER	OK
RETURN	BACK
STEP	SLEEP
TV / RADIO	TV/DTV
VIDEO	INFO

ORIGINAL	SUPERIOR
PROG. / EPG	EPG
LANGUAGE	FAV
OPEN / CLOSE	
PAUSE	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
TIME	SHIFT+POWER
SUBTITLE	SHIFT+
REPEAT	SHIFT+BACK
SLOW	SHIFT+SLEEP
OSD	SHIFT+TV/DTV
A - B	SHIFT+INFO
N / P	SHIFT+EPG
L / R	SHIFT+FAV

