



ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	 / AV
SPEED	-/--
START+	VOL+
START-	VOL-
CH. / TRK.+	P+
CH. / TRK.-	P-
END+	UP
END-	DOWN
LEFT	LEFT
RIGHT	RIGHT
RETRK.	BACK
CLK. / CNT.	SLEEP
TV / VCR	TV/DTV
OSD	INFO
CNT. RESET	EPG
3S	FAV
PAUSE	
STOP	
REC / OTR	RED
REW	GREEN
PLAY	YELLOW

[illegible]