



ORIGINAL	REPLACEMENT
POWER	POWER
MUTE	MUTE
LCD MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	AV
-/--	-/--
DVB MENU	
P. MODE	
LIST	
TEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INFO	INFO

ORIGINAL	REPLACEMENT
EPG	EPG
FAV	FAV
HOLD	
RED	RED
GREEN / AUDIO	GREEN
YELLOW / PAUSE	YELLOW
BLUE	BLUE
S. MODE	SHIFT+MUTE
NICAM	SHIFT+1
AUDIO	SHIFT+2
REVEAL	SHIFT+
SIZE	SHIFT+
SUBTITLE	SHIFT+
PAGE+	SHIFT+UP
PAGE-	SHIFT+DOWN
INDEX	SHIFT+EPG

