



ORIGINAL	SUPERIOR
	POWER
M	MENU
/ OFF	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / STORE	/ SOURCE
PRE	-/--
A	
LD/FLAT	

B	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SRND	SLEEP
TV	TV/DTV
?	INFO
CH USER	EPG

ORIGINAL	SUPERIOR
FAV	
PAUSE	/ SMART TUBE
STOP	/ SMART VIDEO
PIP / REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
CD/DVD	SHIFT+1
TUNER	SHIFT+2
TV/STB	SHIFT+3
TAPE	SHIFT+4
AUX	SHIFT+5
AUX 2	SHIFT+6
AUX 3	SHIFT+7
VCR	SHIFT+8
A	SHIFT+
B	SHIFT+
TV	SHIFT+ VOL+
R	SHIFT+ VOL -
SRC+	SHIFT+UP
SRC -	SHIFT+DOWN
AMP -	SHIFT+LEFT
AMP+	SHIFT+RIGHT
C /	SHIFT+BACK
M - PRG	SHIFT+EPG

