



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ SOURCE
CHN LIST	-/--
DISPLAY	
PICTURE	
SOUND	
TV/TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RECALL	BACK
SLEEP	SLEEP
TV/RADIO	TV/DTV
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
ASPECT	/ NET TV
FREEZE	/ SMART
RED / TITLE	RED
GREEN / GOTO	GREEN
YELLOW / REPEAT	YELLOW
BLUE / A - B	BLUE
NICAM / A2	SHIFT+MUTE
CANCEL	SHIFT+EXIT
USB	SHIFT+
REVEAL	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PUASE	SHIFT+YELLOW
FWD	SHIFT+BLUE

