

ORIGINAL	SUPERIOR
POWER	POWER
AUDIO	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	 / SOURCE
DVD	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
SKIP NEXT	VOL+
SKIP PREV	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV/VCR	TV/DTV
TITLE	INFO
PROGRAM	EPG

ORIGINAL	SUPERIOR
MARKER	FAV
EJECT	 / NET TV
PAUSE	
STOP	 / SMART
ANGLE	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
VCR	
POWER	SHIFT+POWER
AUDIO	SHIFT+MUTE
SEARCH	SHIFT+MENU
CLEAR	SHIFT+EXIT
RETURN	SHIFT+1
CLK/CNT	SHIFT+2
REPEAT A – B	SHIFT+3
CLK/CNT	SHIFT+4
CM SKIP	SHIFT+5
LP	SHIFT+6
RANDOM	SHIFT+7
REPEAT	SHIFT+8
REPEAT A – B	SHIFT+9
STEP	SHIFT+0
INPUT VCR	SHIFT+-/--

ORIGINAL	SUPERIOR
DISPLAY	SHIFT+
SETUP	SHIFT+
SEARCH	SHIFT+
CH+	SHIFT+ P.
CH -	SHIFT+ P
UP	SHIFT+UI
DOWN	SHIFT+DOV
LEFT	SHIFT+LEI
RIGHT	SHIFT+RIG
OK	SHIFT+OI
REPEAT	SHIFT+BA
STEP	SHIFT+SLE
SHOWVIEW	SHIFT+EP
SHUFFLE	SHIFT+FA
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RE
REW	SHIFT+GRE
PLAY	SHIFT+YEL
FWD	SHIFT+BLI

