

ORIGINAL	SUPERIOR
DVD	
POWER	POWER
🔊 / AUDIO	MUTE
DISC MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD	📺 / SOURCE
SEARCH	-/--
DISPLAY	📺
ZOOM	🔍
ANGLE	📺
⋮ / SUBTITLE	📺
A – B	VOL+
REPEAT	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SETUP	TV/DTV

ORIGINAL	SUPERIOR
TITLE	INFO
PROGRAM	EPG
MARKER	FAV
OPEN/CLOSE	⬆️ / NET TV
PAUSE/STEP	⏸️
STOP	⏹️ / SMART
RANDOM	RED
BACKWARD	GREEN
PLAY	YELLOW
FORWARD	BLUE
VCR	
POWER	SHIFT+POWER
AUDIO	SHIFT+MUTE
CLEAR	SHIFT+EXIT
1/2/3/4/5	SHIFT+1/2/3/4/5
6/7/8/9/0	SHIFT+6/7/8/9/0
AV	SHIFT+ 📺
OUTPUT SELECT	SHIFT+ -/--
SHOWVIEW	SHIFT+ 📺
C. LOCK	SHIFT+ 🔍
SPEED	SHIFT+ 📺
CM SKIP	SHIFT+ P+
DOWN / CH/TRACK. -	SHIFT+DOWN
UP / CH/TRACKING +	SHIFT+UP

ORIGINAL	SUPERIOR
LEFT	SHIFT+LEI
RIGHT	SHIFT+RIG
OK	SHIFT+OI
REPEAT	SHIFT+BAI
CLK/CNT	SHIFT+SLE
TV/VCR	SHIFT+ TV/I
i	SHIFT+INI
SEARCH	SHIFT+EP
VCR	SHIFT+FA
EJECT	SHIFT+
PAUSE/STEP	SHIFT+
STOP	SHIFT+
REC/OTR.	SHIFT+RE
BACKWARD	SHIFT+GRE
PLAY	SHIFT+YELL
FORWARD	SHIFT+BLI

