



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
MENU	MENU
TV MODE	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
TOP MENU	-/--
DISPLAY	
COPY	
SETUP	
SUBTITLE	
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
TIME SHIFT	SLEEP
HDD/DVD	TV/DTV
SHOWVIEW	INFO
GUIDER	EPG
NAVI.	FAV
OPEN/CLOSE	 / NET TV

[illegible]