



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
+10 / -/-- / ---	-/--
REVEAL / D. DIS.	
SIZE / ZOOM	
MIX	
TV / TEXT	
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
CALL	BACK
SLEEP	SLEEP
P. MODE	TV/DTV
QV	INFO

ORIGINAL	SUPERIOR
SUBPAGE	EPG
S. MODE	FAV
HOLD	/ SMART
RED / DVD SETUP	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO / I/II	SHIFT+MUTE
SUBTITLE	SHIFT+
DVD	
D. MENU	SHIFT+MENU
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
UP	SHIFT+UP
DOWN	SHIFT+DOWN
LEFT	SHIFT+LEFT
RIGHT	SHIFT+RIGHT
ENTER	SHIFT+OK
EJECT	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PAUSE / PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

