



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
LIST	-/--
ECO	
OPTION	
TEXT	
V+	VOL+
V -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
TV	TV/DTV
INFO	INFO
GUIDE	EPG

ORIGINAL	SUPERIOR
FAV	FAV
NETFLIX	/ NET TV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
/ LANG	SHIFT+MUTE
SMART TV	SHIFT+MENU
SUBTITLE	SHIFT+
ZOOM -	SHIFT+LEFT
ZOOM+	SHIFT+RIGHT
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PRE - CH	SIFT+BACK
/ @	SHIFT+EPG
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

