



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 / --	0
AV	/ SOURCE
DVD	-/--
LIST	
DIGITAL / MEDIA	
TEXT / PURPLE	
VOL+	VOL+
VOL -	VOL -
PR+	P+
PR -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
TV	TV/DTV
INFO	INFO
GUIDE	EPG

ORIGINAL	SUPERIOR
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
SOURCE	SHIFT+
TEXT - ZOOM	SHIFT+
TEXT - STOP	SHIFT+
SUBTITLES	SHIFT+
/ LANG.	SHIFT+EPG
ZOOM+	SHIFT+UP
ZOOM -	SHIFT+DOWN
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

