



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
SALIR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUENTE	/ SOURCE
INDICE	-/--
IMAGEN	
MOSTRAR	
SUBPAG	
TEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
	SLEEP
TV/RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
GUIA	EPG
FAV	FAV
ASPECTO	/ NET TV
CONGELAR	/ SMART TUBE
DETENER	/ SMART VIDEO
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
USB	SHIFT+
TAMANO	SHIFT+
SONIDO	SHIFT+
SUBTITULO	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
TIMESHIFT	SHIFT+SLEEP
LISTA GRAB	SHIFT+INFO
LENG.	SHIFT+FAV
STOP	SHIFT+
GRABAR	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

